



P: 678-412-5132

E: Info@icrasolutions.com

Sliding Door Troubleshoot:



If the sleeve that holds the door plunger and springs becomes loose

There is a set 1/4-20" screw inside the 1x2" aluminum that can be tightened with an Allen wrench (DO NOT OVERTIGHTEN OR DOOR PLUNGER WILL NOT BE ABLE TO LATCH PROPERLY)



Sliding Door Troubleshoot:



If your door wants to come out of the bottom track
Simply remove the door from its frame and turn the two wheels on top of the door a couple of turns.



If your door **STILL** wants to come out of the frame when it slides:
Simply remove the door from its frame and unscrew the two Phillips pins on the bottom of the door a couple of turns.

Sliding Door Troubleshoot:



If your door is getting caught halfway and isn't closing properly you may need to adjust your closer bracket. The bracket should be straight up and down, not leaning to one side as this will affect the hydraulic closer.